

HENRI



L'EAU NO. 23
INSTALLATION GUIDE



L'eau No.23 refines the flowing contours of Art Nouveau into a sculptural form of composed presence. Hand-shaped in amber glazed stoneware, its silhouette echoes a softened architectural flourish — measured and poised.



EN: CAUTION

Electrical shock risk. Turn off electrical power at main circuit panel before beginning installation. We recommend working with a qualified electrician to ensure proper installation.

FR: ATTENTION

Risque de choc électrique. Coupez l'alimentation électrique au panneau principal avant de commencer l'installation. Nous recommandons de faire appel à un électricien qualifié pour garantir une installation correcte.

ES: PRECAUCIÓN

Riesgo de descarga eléctrica. Apague la energía eléctrica en el panel principal antes de comenzar la instalación. Recomendamos trabajar con un electricista calificado para garantizar una instalación adecuada.

COMPONENTS



BACKPLATE ASSEMBLY



THREADED NUT



E26/E27 BULB




(2) 8/32" X 1" SCREWS



(3) WAGO CONNECTORS

NOTE: TURN OFF POWER BEFORE BEGINNING INSTALLATION.

STEP 1

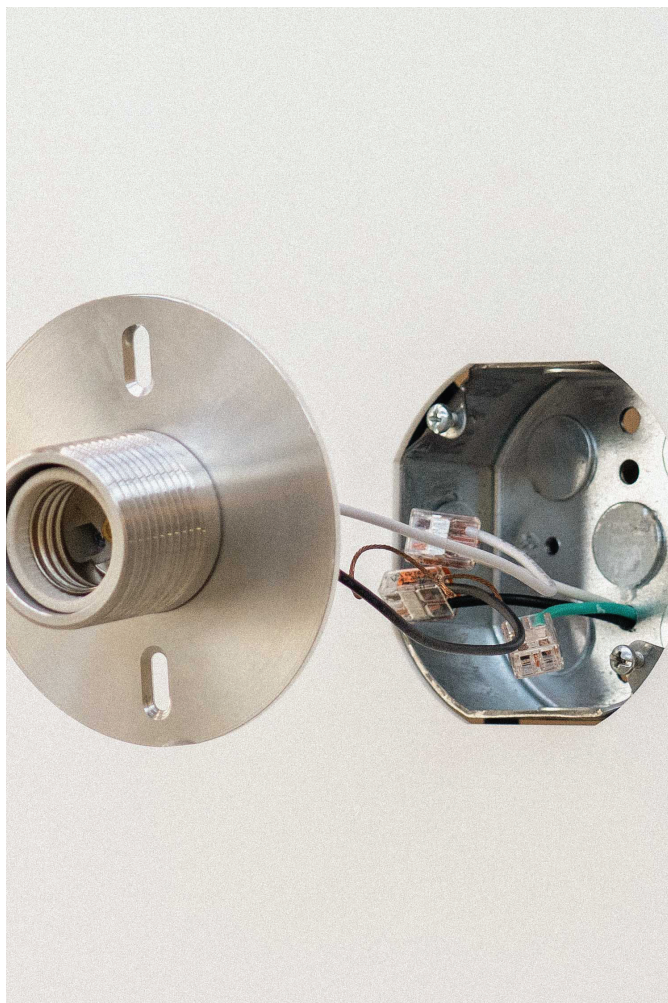


CONNECT THE BACKPLATE ASSEMBLY'S WIRES TO THE CORRESPONDING WIRES FROM THE JUNCTION BOX IN THE WALL.

STEP 2



ATTACH THE BACKPLATE TO THE JUNCTION BOX BY SCREWING THE PROVIDED SCREWS.

STEP 3

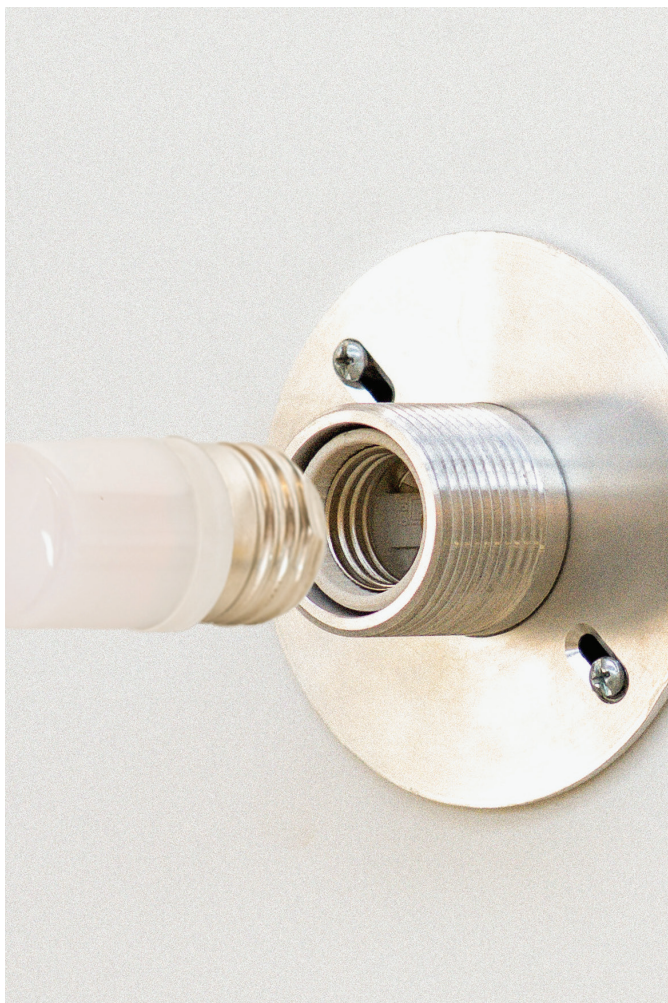


SCREW THE BULB INTO THE SOCKET OF THE
BACKPLATE ASSEMBLY.


STEP 4



PLACE THE CERAMIC CLAW ONTO
THE BACKPLATE AND SECURE WITH THE
GLASS SHADE.



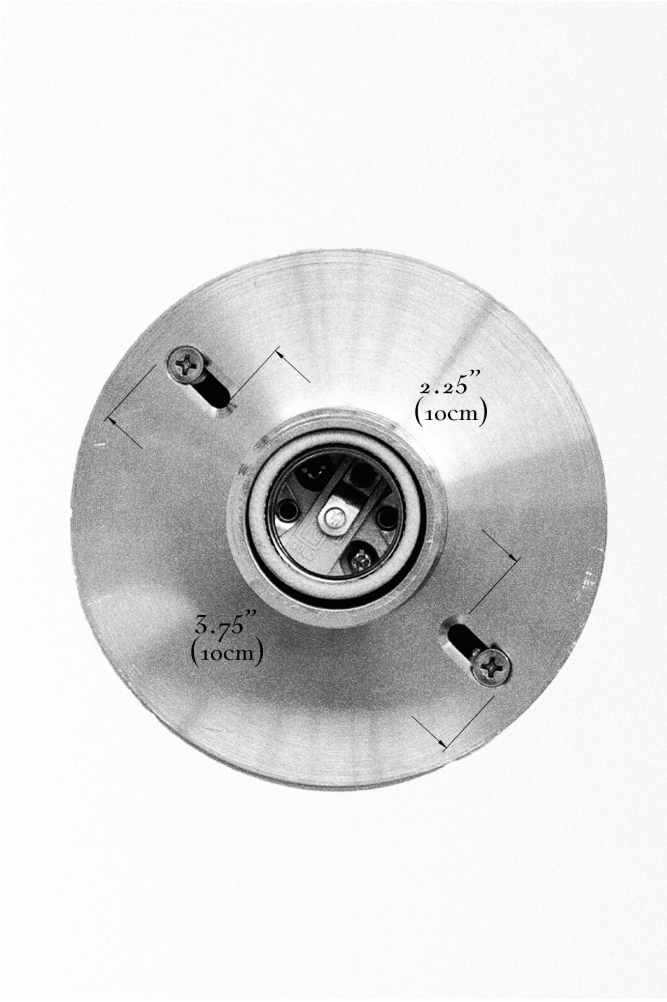

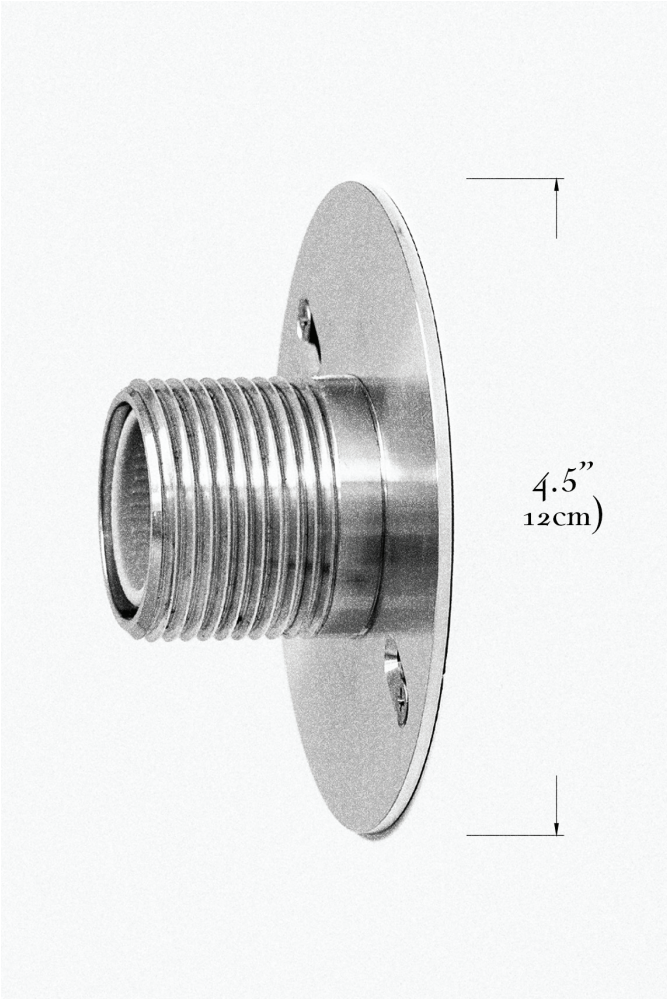

HENRI

ohn-rē