

HENRII



JULIEN NO. 10
INSTALLATION GUIDE



The Julien Collection explores proportion with bold yet refined forms, balancing fullness and restraint. In parchment or amber black glaze, the pieces embody presence and poise, their surfaces marked by fire, time, and enduring weight.



EN: CAUTION

Electrical shock risk. Turn off electrical power at main circuit panel before beginning installation. We recommend working with a qualified electrician to ensure proper installation.

FR: ATTENTION

Risque de choc électrique. Coupez l'alimentation électrique au panneau principal avant de commencer l'installation. Nous recommandons de faire appel à un électricien qualifié pour garantir une installation correcte.

ES: PRECAUCIÓN

Riesgo de descarga eléctrica. Apague la energía eléctrica en el panel principal antes de comenzar la instalación. Recomendamos trabajar con un electricista calificado para garantizar una instalación adecuada.

COMPONENTS



BACKPLATE ASSEMBLY



THREADED NUT



E26/E27 BULB




(2) 8/32" X 1" SCREWS



(3) WAGO CONNECTORS

NOTE: TURN OFF POWER BEFORE BEGINNING INSTALLATION.

STEP 1

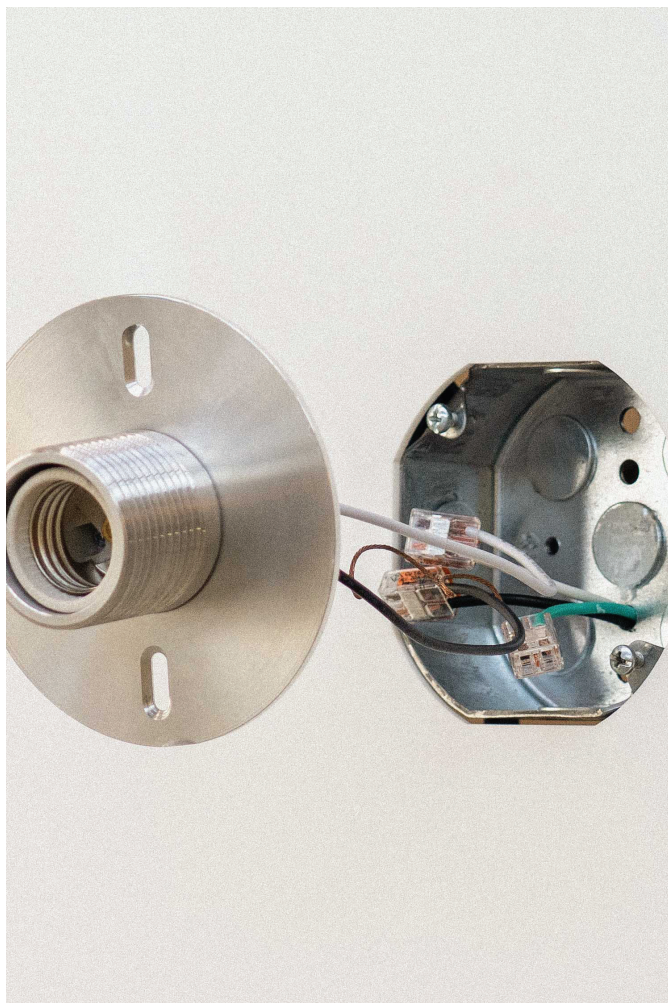


CONNECT THE BACKPLATE ASSEMBLY'S WIRES TO THE CORRESPONDING WIRES FROM THE JUNCTION BOX IN THE WALL.

STEP 2



ATTACH THE BACKPLATE TO THE JUNCTION BOX BY SCREWING THE PROVIDED SCREWS.

STEP 3

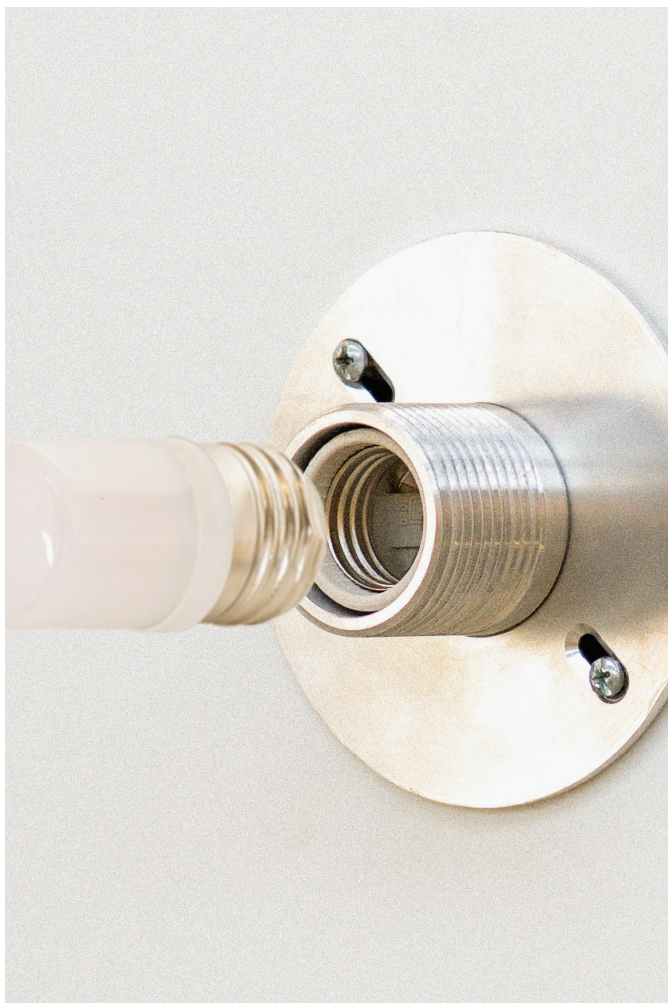


SCREW THE BULB INTO THE SOCKET OF THE
BACKPLATE ASSEMBLY.


STEP 4



PLACE SHADE ONTO THE BACKPLATE AND
SECURE WITH THE PROVIDED NUT.



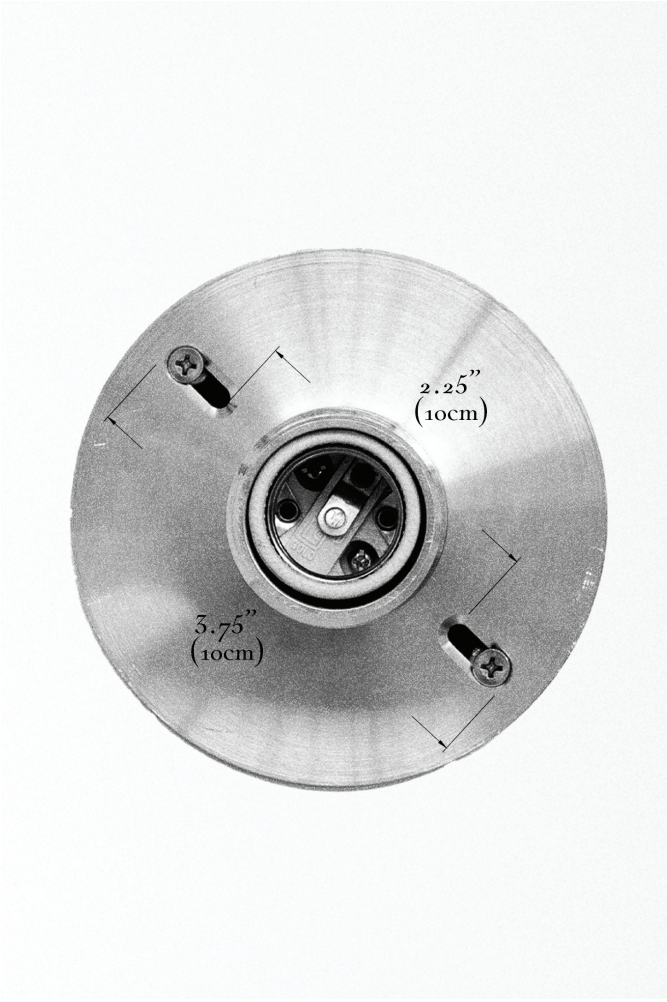

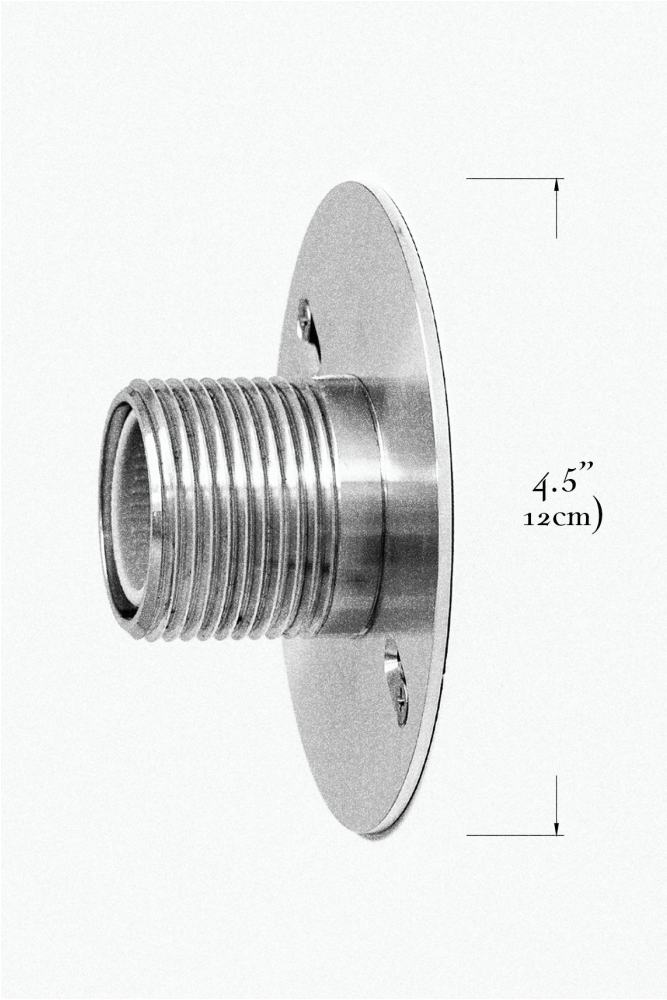

HENRI

ohn-rē